



TRIPOD ROASTER

CARE & USE

Care of the Tripod Roaster

The Roasting Cage has a protective, food-safe coating for transportation. We recommend that it is washed with hot soapy water before first use.

After use, wash again with soapy water and apply a light coat of vegetable oil to keep it in good condition.

Use of the Tripod Roaster

1. Open the cage by twisting the lock mechanism, place the meat or vegetable in the cage, then shut and twist the lock shut.
2. Hang the Roaster from the Cooking Tripod chain using the hoops.
3. The cage can be turned by using the specially designed handle. This can be done as often as you like to get an even cook around your meat or vegetables.